



Handheld laser welding machine User Manual

Air 1200

Original Instructions

Quotations

Thank you for choosing to use our company's products. We will provide you with perfect after-sales service and solutions, please keep this manual and other accessories, so that you can better use.

This specification gives a detailed introduction to the safe use of the products, including the installation, operation, and maintenance instructions, etc.

If you are using the product for the first time, please read this material carefully before using it.

Due to the constant update of the product functions, the product you receive may be different from the instructions. The Company reserves the right of final interpretation of this matter.

If you have any questions or better suggestions, please visit our website www.bodor.com to leave a message or call 24 hours for free 400-991-7771 for consultation.

Directory

Quotations	II
Directory	III
Chapter 1 Description of Characteristics	1
Chapter 2 Security Information	1
1-The handheld laser welding machine is safe for use	1
2-Intended use and reasonably foreseeable misuse	2
3-Safety regulations	2
4-Laser protection	4
5-Safety of the welding features	5
6-Reference criteria	6
7-General safety instructions	7
8-The source of danger	13
9-More security information	13
Chapter 3 Product Description	14
1- Feature introduction	14
2- Laser welding machine model description	14
3- Certificate of conformity	15
4- Rear panel description	16
5- Optical output terminal	16
6- Knob screen operation instructions	17
7- Joint specification	22
8- Nameplate Description	23
9- FDA Explanation	23
Chapter 4 Detailed Specifications	26
1- Optical characteristics parameter table	26
2- General characteristic parameter list	26
3- Installation environment requirements	27
4- Structure layout	29
Chapter 5 Unboxing Guide	30
1 – Unboxing steps	30
2 – Packing list	31
Chapter 6 User Guide	32
1-Precautions	32
2- Power connection	32
3-Securely lock the connection	32
4- Gas connection	32
5- Wire feeder connection	32
6- Startup procedure	37
7- Protective mirror replacement	38
8- Welding process parameter	41
9- Fault list	42
10-Nozzle usage instructions	43

Chapter 7 Maintenance and upkeep	45
Chapter 8 Transportation and Storage	47
1- Transport requirement	47
2-Storage requirement	47
Chapter 9 Company Information	47

Chapter 1 Description of Characteristics

The unique properties of lasers can cause safety hazards that cannot simply be treated as other light sources, and all personnel operating or near lasers must be aware of these particular hazards.

Therefore, Bodor Laser recommends: Please strictly follow all warnings and safety tips in this manual to ensure operation safety and best performance, in the process of operation, maintenance and service of this equipment, in order to ensure the safety of operators and users, do not disassemble the equipment.

Chapter 2 Security Information

1-The handheld laser welding machine is safe for use

Handheld laser welding machine is a dangerous, invisible laser radiation laser products. This product emits infrared laser radiation with a wavelength of 1080nm, and the average power radiated by the welding head is greater than 100W, which can cause damage to the eyes and skin directly or indirectly exposed to such light intensity. The infrared radiation is not visible, and the laser beam can cause irreparable damage to the retina or cornea. Be sure to wear appropriate and certified 1080nm near-infrared laser protective glasses before operating the handheld laser welding machine.

(1) For the safety of you and others, it is strictly prohibited to point the welding head at yourself or others;

(2) The handheld laser welding machine must wear appropriate and certified 1080nm near-infrared laser protective glasses(Protection in accordance with EN207:2017) and anti-high temperature gloves before use;

(3) For the safety of you and others, the crocodile clip must be clamped on the welding workpiece before triggering the laser, and it is strictly prohibited to clamp in other places except the workpiece to avoid abnormal light resulting in safety risks;

(4) The welding operation of the handheld laser welding machine needs to be carried out in an independent space with laser protection; Non-welding personnel and combustible and flammable materials should be more than 10 meters away from the welding operation table, and fire extinguishers should be placed near the welding area;

(5) Wear a mask when welding high-inverse materials;

(6) Ensure that the hand-held laser welding machine is grounded properly, otherwise it may cause the product shell to be charged, resulting in personal injury to the operator; If the grounding is not performed according to the requirements, it may cause hidden faults such as laser alarm, no light, and laser instability.

(7) Do not work in the environment of rain and direct sunlight, otherwise it may cause high temperature and humidity alarm or short circuit, affect the normal use of the laser, and even cause security risks.

2-Intended use and reasonably foreseeable misuse

1. Intended use

This product uses a high-energy density laser beam as a heat source to achieve laser welding and cutting functions by locally heating and melting the base material. This product can achieve the same welding of metal materials such as steel, aluminum, copper, and stainless steel, as well as the mutual welding between carbon steel, stainless steel, and galvanized sheet.

2. Reasonably foreseeable misuse

(1) Low melting point materials

Materials such as zinc, lead, tin, etc. have lower melting points and are prone to vaporization during laser welding, resulting in the inability to form good welding joints.

(2) Oxide materials




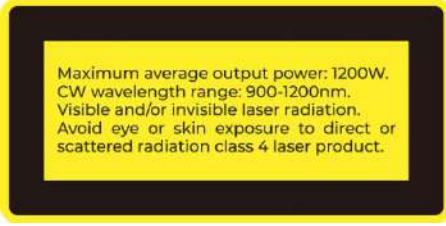
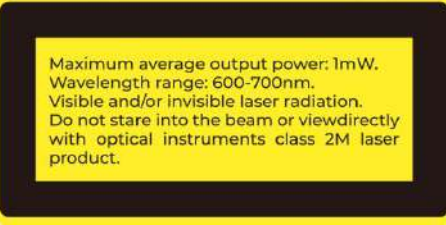
Materials such as silicon dioxide and aluminum oxide are prone to react with oxygen in the air to form an oxide layer, which affects the welding effect.



(3) Transparent materials

Materials such as glass and crystal have a high transmittance to laser, making it difficult to form a good melting pool on the surface of the material, and therefore are not suitable for laser welding.

3-Safety regulations

As shown in the following table, all safety warning signs during the operation of the handheld laser welding machine include:

safety signs	Description
	<p>warning:</p> <p>There is potential harm to human body; follow certain procedures, otherwise it may cause certain harm to you or others.</p> <p>Do not violate the requirements of the warning sign during the operation to ensure the personal safety of the operator.</p>
	<p>This logo represents the laser radiation, and we have attached this logo to the laser of the product outlet end.</p>
	<p>Class 4 laser product</p> <p>Avoid eye or skin exposure to direct or scattered radiation</p>
	<p>The maximum laser output power is about 1200W.</p> <p>Avoid eye or skin exposure to direct or scattered radiation</p>
	<p>Avoid direct or scattered radiation from the eyes or skin</p>

 <p>HINWEIS</p> <p>Wear approved eye protection. Tragen Sie eine zugelassene Brille.</p> <p>Must wear protective gloves. Schutzhandschuhe tragen müssen.</p> <p>Must wear dust-proof mask. Sie müssen eine Staubmaske tragen.</p>	<p>Wear approved goggles, must wear protective gloves, must wear dust masks</p>
 <p>HINWEIS</p> <p>Read and understand operator manual before using this machine. Bitte lesen und verstehen Sie vor der Verwendung des Geräts das Bedienungsanleitung.</p>	<p>Please read and understand the user manual</p>
<p>No identification</p>	<p>Important: Please do not ignore important information related to product operation.</p>

please note:

© Bodor laser Air series handheld laser welding machine with a wavelength range of 1060 nm to 1100 nm, not within the visible range, but these beams may cause irreversible damage to the retina and cornea.

©Bodor Laser recommends that you wear qualified and safe protective glasses at all times.

4-Laser protection

1. Laser protection requirements

Laser safety protection glasses should be selected on the standard of shielding the laser within the entire wavelength range emitted by the laser, Protection in accordance with EN207:2017.

When operating the laser equipment, select safety glasses according to the laser wavelength and ensure that the laser is worn at all times.

If the device is a laser tunable or Raman product, it will emit a laser beyond the normal output wavelength range of the device laser, which should be protected accordingly.

2. Laser protection equipment manufacturer

Bodor Laser recommends the following materials or equipment from several laser safety equipment suppliers: LaserVision USA、Kentek Corporation 、Rochwell Laser Industries Etc. 。

These supplier information provided by Bodor Laser accounts only for the convenience of user use and is not liable for any problems caused by the use of the above supplier's products.

5-Safety of the welding features

1. Radiation hazards

Visible and invisible light radiation are generated during welding. The interaction between a high power laser beam and the welded target material may produce a plasma that produces UV radiation and "blue light," which may lead to conjunctivitis, retinal photochemical damage, or skin sunburn-like reactions. Welders exposed to invisible UV light without adequate protection may suffer permanent eye damage.

2. Skin hazards

Exposure to infrared light and ultraviolet radiation during welding damages the skin. Infrared and ultraviolet light can cause skin burns, increasing the risk of skin cancer and accelerating signs of skin aging. Welding sparks may also cause burns. Laser material processing can transfer a lot of energy to the parts. Even after the cutting process is done, the parts can be very hot. Ensure that appropriate PPE is used to prevent potential burns. Take precaution to prevent skin damage by wearing protective clothing such as fireproof gloves, hats, leather aprons and other fire-resistant clothing. The sleeves and collar should be buttoned up.

3. Fire hazards

If combustible or flammable materials are near the welding area, the heat and sparks generated during the welding process can cause a fire or explosion. Laser

welding can only be performed when there is no combustible material in the area. Do not weld containers containing flammable or combustible materials. If the contents of the container are unknown, they should be assumed to be flammable or combustible. Fire extinguishers should be located nearby, easily accessible and trained to use them.

4. Smoke hazards

Welding "smoke" can be composed of very fine particles and gases. Welding smoke and gas come from the welding material

Or any combination of filling materials used, protective gases used, paints, coatings, chemical reactions, and air pollutants. Welding smoke can adversely affect the lungs, heart, kidneys, and the central nervous system.

(1) When welding, keep your head away from the smoke. Always weld in fully ventilated areas to ensure safe air breathing.

(2) Use the exhaust system to remove steam, particles and hazardous debris from the welding zone.

(3) Breathing apparatus may also be required in confined spaces and in other situations.

(4) Routine air monitoring shall be conducted to determine the hazardous smoke levels in the welding area.

5. Cylinder safety

If the cylinder is damaged or placed near the welded area, the cylinder may explode. Protective gas cylinders shall be placed in places free from impact or damage. Place them away from heat sources, sparks, or flames. The cylinder must be stored upright and fixed to a fixed bracket. Need a working adjuster for the required gas and pressure. All hoses and fittings shall also be suitable for application and remain in good working condition.

6-Reference criteria

laser safety:

IEC60825-1-2014

Functional Safety:

EN ISO 13849-1:2023 PL d

Safety of Machinery:

EN ISO 12100:2010

EN 60204-1:2018

EN ISO 11553-1:2020

EN ISO 11553-2:2008

Electromagnetic compatibility anti-interference:

EN 61000-6-4:2007 + A1:2011

EN 61000-6-2:2005 + AC: 2005

EN 61000-3-2:2014

EN 61000-3-3:2013

please note:

© The Bodor Laser Air series handheld laser welding machine meets the Low voltage requirements specified in the “CE LVD Directive” of the European market.

© According to the relevant national standards and requirements, the laser must be classified according to the output power and the laser wavelength.


According to national standards, bodor laser high power Air series laser products belong to Class 4 products.

© According to the relevant EU standards and requirements, this product belongs to Class Class 4 instrument (according to EN 60825-1, clause 9).

7-General safety instructions

1.Mirror Reflection


The laser output port position may generate a secondary laser beam and radiate outward at multiple angles.

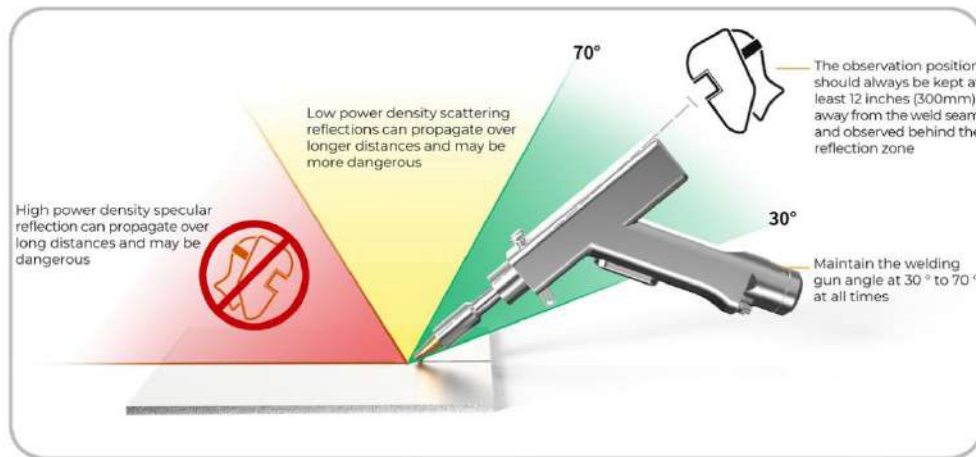

Welding gun angle, reflection, and viewing position



Laser beams can reflect from multiple angles, so it is important to always be aware of the possibility of multiple reflections during the welding process.

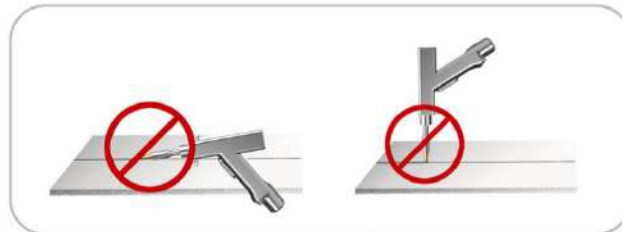

Improper positioning angle of welding gun

This phenomenon of the main beam in the laser is called mirror reflection.

Although the energy of the secondary laser beam is much less than that of the primary laser beam, this intensity may also cause damage to things such as the human eye, skin or the surface of some material.

WARNING:

© Because the laser radiation light is not visible, you must be extremely careful to avoid or reduce the mirror reflection.

© Cutting of highly reactive materials, such as aluminum, brass, and copper, is not allowed.

2. Safety instructions for accessories

Laser optics can be damaged by laser exposure, such as video cameras, photomultiplier tubes and photoelectric secondary tubes.

Attention should be paid to the relevant device protection.

WARNING:

© Bodor Laser Air series fiber laser output laser strength enough to cut or weld

metal and burn

Skin, clothing and paint, ignition of volatile substances such as alcohol, gasoline, ether, etc.

Therefore, during operation, isolate flammable items around the laser.

3. Optical operation instructions

Bodor Laser strongly advises you to read the following operational points before operating the laser:

- (1) When the power supply is started, do not view the laser light hole directly;
- (2) Avoid the placement of the laser and related optical output devices on the same level as the eyes;
- (3) The laser output port shall be equipped with a mounted laser beam housing;
- (4) According to the output power and wavelength of the laser requirements of safety protection equipment to ensure the safety of operators;
- (5) Do not use lasers in a dark environment;
- (6) Do not open the laser without installing optical coupling fiber or optical output connector;
- (7) When debugging calibration and focusing, please carry it under the low power output condition, and then slowly increase to high power after commissioning;
- (8) If the equipment is not operated in the manner guided in this document, the protection device and performance of the equipment may be weakened, and Bodor Laser will not no warranty.
- (9) To avoid the laser working in the hazardous area with red condensation in the comprehensive environment shown in the following figure, the specific control standards are as follows::

Comparison table of ambient temperature, relative humidity and dew point													
Relative Humidity %	30	35	40	45	50	55	60	65	70	75	80	85	90
Ambient Temperature (°C)	the dew point Td (°C)												
10	-7.0	-5.0	-3.0	-1.3	0.0	1.5	2.5	3.6	4.8	5.8	6.7	7.6	8.4
11	-6.5	-4.0	-2.0	-0.5	1.0	2.5	3.5	4.8	5.8	6.7	7.7	8.6	9.4
12	-5.0	-3.0	-1.0	0.5	2.0	3.3	4.4	5.5	6.7	7.7	8.7	9.5	10.9
13	-4.5	-2.0	-0.2	1.4	2.8	4.1	5.3	6.6	7.7	8.7	9.6	10.5	11.4
14	-3.2	-1.0	0.7	2.2	3.5	5.1	6.4	7.5	8.6	9.6	10.6	11.5	12.4
15	-2.2	-0.3	1.5	3.1	4.6	6.0	7.2	8.4	9.6	10.6	11.6	12.5	13.4
16	-1.3	0.5	2.4	4.0	5.6	7.0	8.3	9.5	10.6	11.6	12.6	13.4	14.3
17	-0.5	1.5	3.2	5.0	6.5	8.0	9.2	10.2	11.2	12.2	13.2	14.0	14.9
18	0.2	2.4	4.0	5.8	7.4	9.0	10.2	11.3	12.5	13.5	14.5	15.4	16.2
19	1.0	3.2	5.0	7.2	8.4	9.8	11.0	12.2	13.4	14.5	15.4	16.5	17.3
20	2.0	4.0	6.0	7.8	9.4	10.7	12.0	13.2	14.4	15.4	16.5	17.4	18.3
21	2.8	5.0	7.0	8.6	10.2	11.0	12.9	14.2	15.3	16.4	17.4	18.4	19.3
22	3.5	5.8	7.8	9.5	11.0	12.5	13.8	15.2	16.2	17.3	18.4	19.4	20.3
23	4.4	6.8	8.7	10.4	12.0	13.5	14.8	16.2	17.3	18.4	19.4	20.4	21.3
24	5.3	7.7	9.7	11.4	13.0	14.5	15.8	17.0	18.2	19.3	20.4	21.4	22.3
25	6.2	8.6	10.2	12.3	14.0	15.4	16.8	18.0	19.1	20.2	21.3	22.3	23.2
26	7.0	9.4	11.4	13.2	14.8	16.3	17.7	19.0	20.1	21.2	22.3	23.3	24.2
27	8.0	10.2	12.2	14.0	15.8	17.3	18.7	19.9	21.1	22.2	23.2	24.2	25.1
28	8.8	11.2	13.2	15.0	16.7	18.0	19.6	20.9	22.0	23.0	24.1	25.1	26.0
29	9.7	12.0	14.0	15.9	17.6	19.2	20.5	21.8	23.0	24.1	25.1	26.1	27.0
30	10.5	12.9	14.9	16.8	18.5	20.0	21.4	22.8	24.0	25.1	26.1	27.1	28.0
31	11.4	13.8	15.9	17.8	19.4	20.9	22.4	23.8	24.9	26.1	27.1	28.1	29.0
32	12.2	14.7	16.8	18.9	20.3	21.9	23.3	24.8	25.9	27.1	28.1	29.1	30.0
33	13.0	15.6	17.6	19.6	21.3	22.9	24.4	25.9	27.0	28.1	29.1	30.1	31.0
34	13.9	16.5	18.6	20.5	22.2	23.8	25.3	26.8	27.9	29.0	30.0	31.0	32.0
35	14.9	17.4	19.5	21.4	23.0	24.6	26.1	27.6	28.7	29.8	30.8	31.8	32.8
36	15.7	18.1	20.3	22.2	23.9	25.5	27.0	28.4	29.5	30.6	31.6	32.6	33.6
37	16.6	19.2	21.2	23.2	24.9	26.5	28.0	29.4	30.5	31.6	32.6	33.6	34.6
38	17.5	19.9	22.0	24.0	25.9	27.4	28.9	30.3	31.4	32.5	33.5	34.5	35.5
39	18.1	20.8	23.0	24.9	26.8	28.3	29.8	31.2	32.3	33.4	34.4	35.4	36.4
40	19.2	21.6	24.0	25.9	27.8	29.3	30.8	32.2	33.3	34.4	35.4	36.4	37.4

WARNING:

◎ In order to ensure a good operating environment for the laser and reduce the probability of malfunctions caused by condensation. It is strongly recommended that the laser be used in a comprehensive environment with a temperature of $\leq 30\text{ }^{\circ}\text{C}$ and a relative humidity of $\leq 70\%$.

pay attention to:

◎ The laser path output is exposed to a lens with an anti-reflective coating if your laser steps

The optical path has this kind of optical lens. Before using the laser, please strictly check the laser output head lens and the rear stage lens to ensure that there is no dust and any other debris on the lens.

Any visible attachment can cause severe damage to the lens, burning the laser or any rear optical path.

◎ Refer to the Optical Fiber Connector Inspection and Cleaning Guide to follow the cleaning inspection process for lenses.

◎ Be careful of the hot phenomenon or molten metal particles that may occur during the laser cutting operation.

◎ For laser output debugging and calibration, set the laser to pass through

infrared under low power output conditions

Check the output spot quality of the laser, and then gradually increase the output power.

WARNING:

◎ Select safety protective equipment according to the output power and wavelength of the laser.

◎ Do not directly view the optical fiber or collimator, and ensure that safety glasses are always worn during each operation.

4. Electrical operation instructions

Bodor Laser strongly advises you to read the following operating points before operating the laser:

(1) Ensure that the equipment shell is well grounded and any point in the grounding circuit may lead to personal injury;

(2) For the power supply connected to the equipment, please confirm that the protection area is connected before use;

(3) In order to reduce the danger of fire, if necessary to replace the line fuse can only be the same type, the same grade, and other fuses or materials cannot be used to replace;

(4) Ensure that the input AC voltage of the laser is normal AC city voltage , and the wiring is correct, any wrong wiring mode, may cause personal or equipment injury;

(5) This product has no parts, parts or components to be repaired by users, and all maintenance operations shall be completed by Bodor laser professionals;

(6) Do not remove the casing, remove the laser and destroy the relevant labels without authorization, there is a risk of electric shock or burn;

(7) Any unauthorized disassembly of the products will no longer enjoy the

warranty rights.

WARNING:

© The input voltage of the laser is single-phase AC, and there is a danger of electric shock.

All associated cables and cables have potential hazards.

5. Laser operating environment requirements

To ensure the safety of the laser work area, a suitable enclosure shall be used.

This includes but is not limited to the risk prevention work such as laser safety signs and interlock devices, and the interaction between the laser and the working surface, causing gas, sparks and debris due to high temperature, which may pose additional safety hazards.

The corresponding operators should undergo certain assessment training, and be familiar with and master the routine safety specifications of laser operation.

Note that the output component must not be installed at the same level as the eye.

Due to the interaction of the laser and the metal material, which produces intense ultraviolet or visible radiation, make sure the laser has a protective cover to avoid radiation damage to the eye or other parts of the body.

Bodor Laser recommends that you follow the following measures to extend the service life of the laser:

(1) Please ensure that the working area is properly ventilated and that the laser is placed in the cabinet with temperature and humidity control and dust control function. Do not expose the laser to high temperature and humidity environment.

(2) Running the equipment at high temperatures will accelerate the aging, increase the current threshold, and reduce the laser sensitivity and conversion efficiency. If the equipment is overheated, please stop using it and ask the Bodor Laser for help.

pay attention to:

© Please operate the equipment carefully to avoid causing accidental damage to

the equipment.

6. Noise Description

The equipment operates in compliance with noise standards.

7. Emergency stop instructions

The device is equipped with two emergency stops, both of which can achieve emergency stop function for the laser.

8-The source of danger

Equipment hazards include lasers.

9-More security information

If you need more information on laser safety, please refer to: If you need more information on laser safety, please refer to:

Laser Institute of America(LIA)

13501 Erenuity Drive, Suite 128

Orlando,Florida 32826

Phone:407 380 1553,Fax: 407 380 5588

Toll Free:1 800 34 LASER

American National Standards Institute

ANSI Z136.1, American National Standard for the Safe Use of Lasers

(Available through LIA)

International Electro-technical Commission

IEC 60825-1, Edition 1.2

Center for Devices and Radiological Health

21 CFR 1040.10 - Performance Standards for Light-Emitter Products

US Department of Labor - OSHA

Publication 8-1.7 - Guidelines for Laser Safety and Hazard Assessment.

Laser Safety Equipment

Laurin Publisher

Laser safety equipment and Buyer's Guides

Chapter 3 Product Description

1- Feature introduction

The hand-held laser welding machine integrates the laser, the hand-held welding head and the control system together. Compared with the traditional hand-held welding equipment, it has the characteristics of simple configuration, high integration, small size, simple operation and high intelligence.

Main features:

- (1) High beam quality
- (2) High power, high efficiency
- (3) Compact, strong packaging
- (4) Can adapt to high and low temperature environment for a long time light

Application field:

- (1) Industrial applications
- (2) Scientific research
- (3) Medical equipment
- (4) Advertising industry
- (5) Kitchen and bathroom industry

2- Laser welding machine model description

Model nomenclature	Model meaning
Air 1200	Denotes Bodor Laser forced air cooling 1200W welding machine

3- Certificate of conformity

Bodor Laser guarantees that the product has been thoroughly tested and inspected prior to shipment And meet the published specifications.

After receiving the product, please check whether the packaging and accessories are damaged due to the transportation process.If visible damage occurs, contact Bodor Laser immediately.


4- Rear panel description



Name	Function description
OUTPUT	Nozzle joint
AC220	220 AC power input
FEEDER	Wire feeder interface
ETHERNET	Ethernet interface
LOOP	Ground protection
GAS IN	Protective air intake interface

5- Optical output terminal

The optical fiber head corresponds to the protection window and can be replaced when damaged. Be sure to remove the QBH tail cap before use, which is usually placed with the laser.

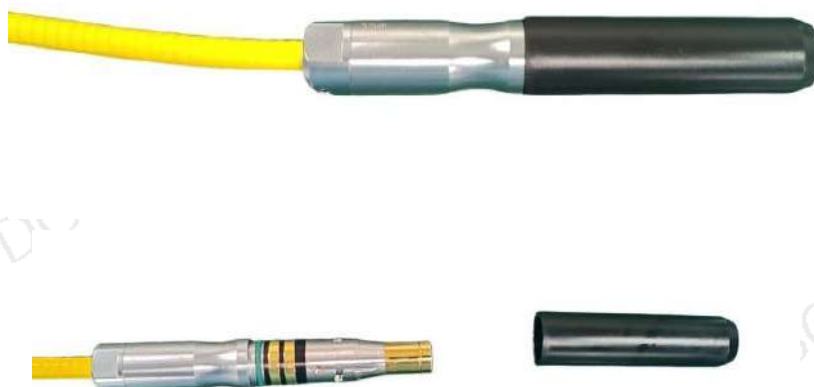

Optical fiber Output head (QBH)

6- Knob screen operation instructions

Knob screen operation guide

(1) Knob icon description



Laser power: Adjusting the laser power output



Laser frequency: The number of laser vibrations per unit time




Galvanometer swing: Welding head galvanometer swing amplitude



Mirror swing frequency: Welding head galvanometer oscillation frequency



Laser duty cycle: The proportion of laser output time to frequency period

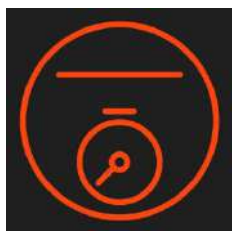

Off light delay: After releasing the trigger of the welding head or disconnecting the ground wire clamp, the time to continue emitting light



Power ramp up time: Welding machine power ramp up time



Power ramp down time: Welding machine power ramp down time




Galvanometer centering: laser focus center position adjustment




Turn on delay: Enter the global parameters and rotate the knob screen to find this function. Short press the screen to adjust the parameters. The time from pulling the trigger to blowing air until the light starts to come out



Fish scale welding: After turning on, enter the function selection interface, rotate the screen clockwise to the fish scale welding parameter function, short press the screen to enter, select the corresponding plate and thickness to start welding work.

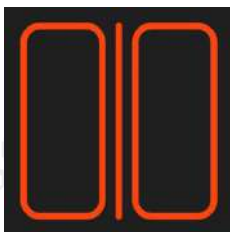

Cutting mode: After turning on, enter the function selection interface, rotate the screen clockwise to the cutting mode parameter function, short press the screen to enter, select the corresponding board and thickness to start cutting work

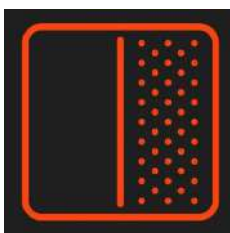

Cleaning mode: Select to directly enter the power swing width and frequency display interface. Short press again to enter the parameter setting interface to set the power and swing width. The maximum swing width is set to 120mm. Note that when the swing width exceeds 5mm, the cleaning mirror group needs to be replaced; The swing frequency is fixed at 100Hz;

Tip: If the swing amplitude is greater than 5mm, the scale tube and locking

components need to be removed, otherwise there is a risk of burning the welding



joint.. Short press after the prompt operation.

appears to perform normal



General welding mode: Short press to enter material selection, short press again to enter thickness selection, short press again to enter the preset process display interface, short press to adjust and save process parameters. The process parameter interface rotates counterclockwise to cycle, clockwise to reach the parameter storage interface, and any process parameter setting interface returns to mode selection on time; The process parameters include laser power, swing width, swing frequency, laser frequency, and laser duty cycle. After completing all parameter modifications, rotate clockwise to select the parameter saving interface to save the modified parameters. After selecting, return to the process display interface.



Global parameters: Global parameter settings include parameters that will take effect for all processes. Short press to enter the parameter settings interface, long press to enter the optical center adjustment interface; The parameter setting interface includes light output delay (minimum can only be 400ms, fixed at 400ms for lower levels), light off delay (default 200ms), power ramp up (default 100), power ramp down (default 0), and air off delay (default 400ms, minimum can only be 400ms, fixed at 400ms for lower levels)




Device activation: The device has completed activation.




Equipment information: Equipment factory related information.



Wire feeding speed: Adjusting the wire feeding speed.

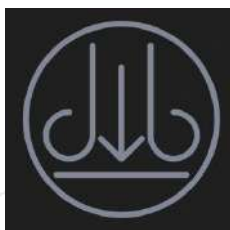


Air pressure: gas pressure display.

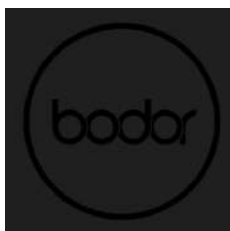

Power on/Screen saver: The power on interface and screen saver interface.

(2) The galvanometer is in adjustment

Find the global setting interface on the main interface of the knob screen, long press the knob screen, and then enter the center adjustment setting interface. Short press the number to turn yellow to adjust the position of the optical center. Short press again to adjust the rotation step value. After completing the adjustment, long press to exit the optical center adjustment, and the value will turn white. Short press the knob screen again to exit and save the optical center position;

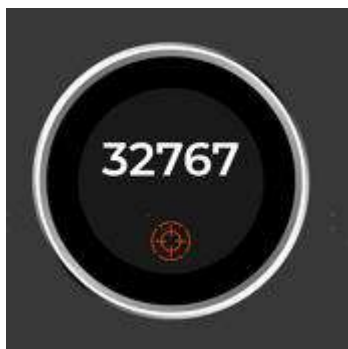


(3) Device information query

On the knob screen, you can press to view device information.




7- Joint specification

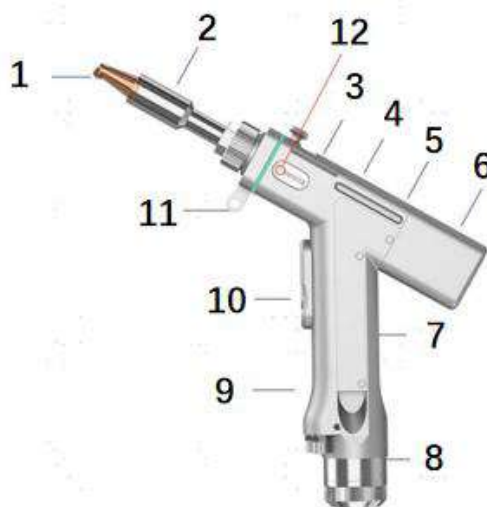

1. Copper mouth
2. Graduated tube
3. Protective lenses
4. Focusing lens
5. Reflector
6. Electric machine
7. Collimating lens
8. QBH Protective case
9. Gas path
10. Switch button
11. Wire feed bracket
12. Status indication


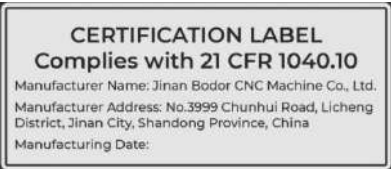

8- Nameplate Description

 <p>bodor CE</p> <p>Jinan Bodor CNC Machine Co.,Ltd. No. 3999 Chunhui Road, Licheng District, Jinan City, Shandong Province, China</p> <p>Main Document Number: 1 Model: 2 Full-Load-Current: 3 Short-circuit Rating: 4 Rated Voltage: 5 Frequency: 6 Rated Power: 7 Laser Power: 8 Weight: 9 Serial No.: 10 ERP No.: 11 Manufacturing Date: 12</p>	<p>1.Main Document Number: Air1200-CE-A-DQ-V1.0 2.Model: Air 1200 3.Full-Load-Current: 30A(110V)/15A(220V) 4.Short-circuit Rating: 5kA 5.Rated Voltage: AC 110/AC 220V 6.Frequency: 50/60 HZ 7.Rated Power: 3300W 8.Laser Power: 1200W 9.Weight: 60KG 10.Serial No.: 11.ERP No.: 12.Manufacturing Date:</p>
---	---

9-FDA Explanation

(1) Label State

Position	Safety label	Description
----------	--------------	-------------

Fiber optic outlet side		Warn personnel to be cautious of Class 4 laser radiation
Fiber optic outlet side		Declare that the product complies with 21 CFR 1040.10 standards
Fiber optic outlet side		Please remind customers that this aperture emits laser beams and caution them against radiation.

(2) Protective housing and interlocking system

1. The structure and layout of the shield should be designed to ensure that the human body cannot directly enter the dangerous area. Shields should be closed mechanisms, meeting specific safety distance and opening size requirements when a mesh structure is required.

2. For the installation of the laser room, should follow the guidance of the professional design, installation team, in accordance with the drawings.

3. The installation of the laser room also includes components such as the house body, internal frame, maintenance door, observation window, safety door, lighting, optical fiber hanging device, monitoring, dust removal, light source room, air conditioning, anti-collision fence.

4. The safety door of the laser room should be connected with the product remote control chain connector. When an external person intervenes and opens the door, the terminal of the connector opens and the laser machine stops launching. Prevent external personnel or unauthorized personnel from exposure to dangerous radiation.

5. Use of interlocking system:

In the laser control zone, walls and doors can limit the hazard of laser radiation. The interlocking system connected to the door can actually operate to restrict access when a hazard occurs, allowing only trained, authorized and appropriately protective equipment to enter.

(3) Equipment laser parameter information

Indicator laser	
Laser Class:	Class IIIb
Wavelength:	640-700nm
Maximum radiant power:	<0.5W
Working laser	
Laser Class:	Class IV
Wavelength:	1070-1080nm
Maximum radiant power:	>0.5W

Notes: Caution—use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Chapter 4 Detailed Specifications

1- Optical characteristics parameter table

Serial number	Characteristic parameter	Test condition	Minimum value	Typical value	Maximum value	unit
1	Working mode	Continuous/Pulse				
2	Polarization state	Random				
3	Output power	100% continuous	1200	1240		W
4	Power regulation range		10%		100%	
5	Central wavelength	100% continuous	1070	1080	1090	nm
6	Spectral bandwidth			3	5	nm
7	Short-time power stability	100% continuous >1h		±1%	±2%	
8	Long-term power stability	100% continuous >24h		±2%	±3%	
12	Indicated red light power		0.1	0.5		mW
13	Optical fiber cable length			5		m
14	Output fiber core diameter			20		u m
15	Bending radius of the optical fiber		175			mm
16	Output mode	QBH				

2- General characteristic parameter list

Optical performance parameter	
Output power (W)	1200W
Working mode	Continuous/Pulse
Output power adjustment range	1-100%

(%)	
Output laser wavelength (nm)	1080±10
Power stability	< 3%
Laser response time	10us
Maximum modulation frequency	5k HZ
Indicated laser wavelength (nm)	650
Indicates the adjustable range of laser power (mW)	< 1mW
Laser conduction system parameters	
Interface type	Wire feed type hand-held welding head
Collimating focal length	60mm
Focal length	150mm
Transmission length	Standard length 5m±0.5m
Job requirement	
Cooling and protective gas	Inert gas
Operating ambient temperature range	-20~40°C
Working environment humidity range	≤90%
Input voltage	100-240 V
Input frequency	50/60Hz
Overall power	3300W
Welding machine parameters	
Whole machine weight	60kg
External dimensions	530mm×380mm×590mm
Laser swing amplitude	0-5mm

3- Installation environment requirements

1、 There should be no shelter within 1 meter of the inlet and outlet to avoid affecting the cooling effect of the equipment.



2、 Shall not be installed in corrosive, flammable gas, dust, oil mist, conductive dust (toner, metal powder), humid high temperature, direct sunlight and other harsh environment.

3、 The ambient air cleanliness level required for optical fiber output heads installation: Class 1000 or more. It is recommended to configure the corresponding standard purification workbench.

4、 Laser operating environment temperature: $-20^{\circ}\text{C} - 40^{\circ}\text{C}$.

5、 Laser operating environment humidity: 10% - 90%.

6、 Altitude: $\leq 2000\text{m}$.


7、 The lighting condition of the operating room is good, and there should be no interference from strong vibration and strong electromagnetic field equipment within 20 meters around the equipment(There is no interlocking or overlapping of wiring harnesses between devices).Do not work on the same platform as strong magnetic equipment such as argon arc welding and secondary protection welding.

8、 In order to ensure that the air in the equipment operation room is clean, the customer should set up the air extraction and smoke exhaust system according to the site conditions after the equipment installation and commissioning;

9、 Air pressure: $\leq 6\text{bar}$

4- Structure layout

Three views of welding machine

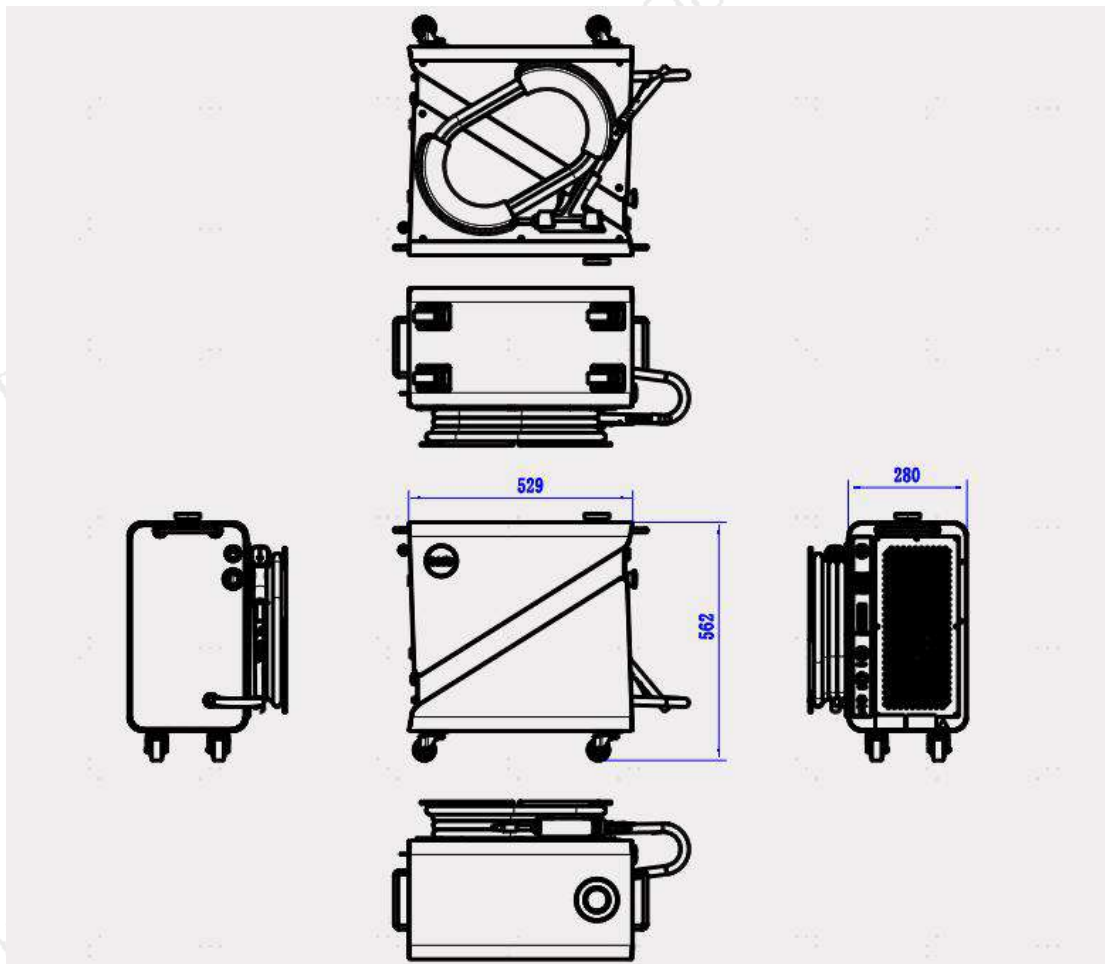

Chapter 5 Unboxing Guide

1 – Unboxing steps

Welding machine is a precision valuables, Bodor laser recommend you to follow the following steps, step by step unpack the box:

(1) Place the packing case containing the laser device on a horizontal platform, such as the floor or a large table.

(2) Open the main packing box, remove the foam shielding plate, and take out the matching items.

(3) There is a welding head on the side of the welding machine that connects the fiber optic cable. Please take it out carefully to ensure that the maximum bending radius of the fiber optic armored cable is greater than 175mm. Lift out the welding machine and take out the wire feeder and other accessories.

(4) Please check the parts against the Packing List.

(5) Please properly store all unpacked items in case of future transportation or storage needs.



WARNING:

© If you find any damage to the outer packaging or internal components after receiving the product, please contact Bodor Laser or local immediately Representative contact.

2 – Packing list

Serial Number	Name	Specifications and Models	Unit	Quantity
1	Laser welding machine	Air 1200	PC	1
2	Wire feeder (individually packaged)	Bodor-AMF-A (Including signal lines, wire tube, wire feed wheel)	PC	1
3	220VAC Power cord (onboard)	5 m	PC	1
4	Ground wire	5 m	PC	1
5	Copper muzzle box	Contains 8 copper nozzle, 1 graduated tube	PC	1
6	Protective lens	D18×2-PW-3KW-15	PC	5
7	High-soft Category 5 network cable Communication cables	SK-ECT 8-core 0.8M	PC	1
8	QBH Black protective cap	/	PC	1
9	Welding machine usage guide	BW12-210×285mm	PC	1
10	Trachea	PU6×4 mm	M	0.1
11	Reduced diameter straight through	PG10-6	PC	1
12	High-power aircraft plug-in motherboard	PKF32G423	PC	1
13	High power aviation plug-in male seat	PKX32M435	PC	1

Chapter 6 User Guide

1-Precautions

© During the use of the welding machine, it is forbidden to use it at an inclined angle.

© Please refer to the "Detailed Specification Sheet" section to select the appropriate power supply.

© Refer to the "General Safety Instructions section" to check whether the external working environment of the welding machine meets the requirements.

2- Power connection

The Air 1200 power input cable needs to be connected to single-phase AC power. Ensure that the live line, neutral line, and ground cable are properly connected. Poor contact of the ground wire may cause potential damage to the welding machine. The power supply is located near the power supply unit of the equipment, making it convenient to disconnect the electrical power supply connection during the operation process.

3-Securely lock the connection

Before turning on the laser, the safety lock must be connected to the laser LOOP interface, and when the laser is ready to be released, the other end of the safety lock (crocodile clip) needs to be clamped to the workpiece, ensuring that the crocodile clip and the welding head form a loop before the laser can be released.

4- Gas connection

The welding head is cooled by inert gas to ensure welding purity and welding air pressure, generally using nitrogen and argon as shielding gas, the purity of shielding gas needs to meet 99.99%, and the inlet air pressure needs to be greater than 0.3 bar. Connect the 6mm tubing to the GAS IN port to ensure a gas flow $\geq 15\text{L/min}$.

5- Wire feeder connection

1、Operating environment and parameters

Placement environment	Flat, vibration and shock-free
Operating ambient temperature (°C)	10~40
Humidity of the working environment (%)	<70
The maximum supported wire weight	25KG
The maximum supported wire feeding wire diameter	1.6mm

Pay attention to the information

1.1 Make sure to be reliably grounded before power supply.

1.2 The wire feed wheel matches the wire diameter and corresponds to the wire feeding tube.


1.3 Keep the wire feeding tube straight and smooth.

2.Installation of Welding wire reel

2.1. The welding wire is an ordinary welding wire, and the common 5KG-25KG can be installed, but do not use the flux-cored wire;

2.2. By pressing the wheel to adjust the force of the roller, so that it is in the appropriate tension, that is, there is no delay in wire feeding (usually no need to adjust);

2.3. Cover the cap once adjusted

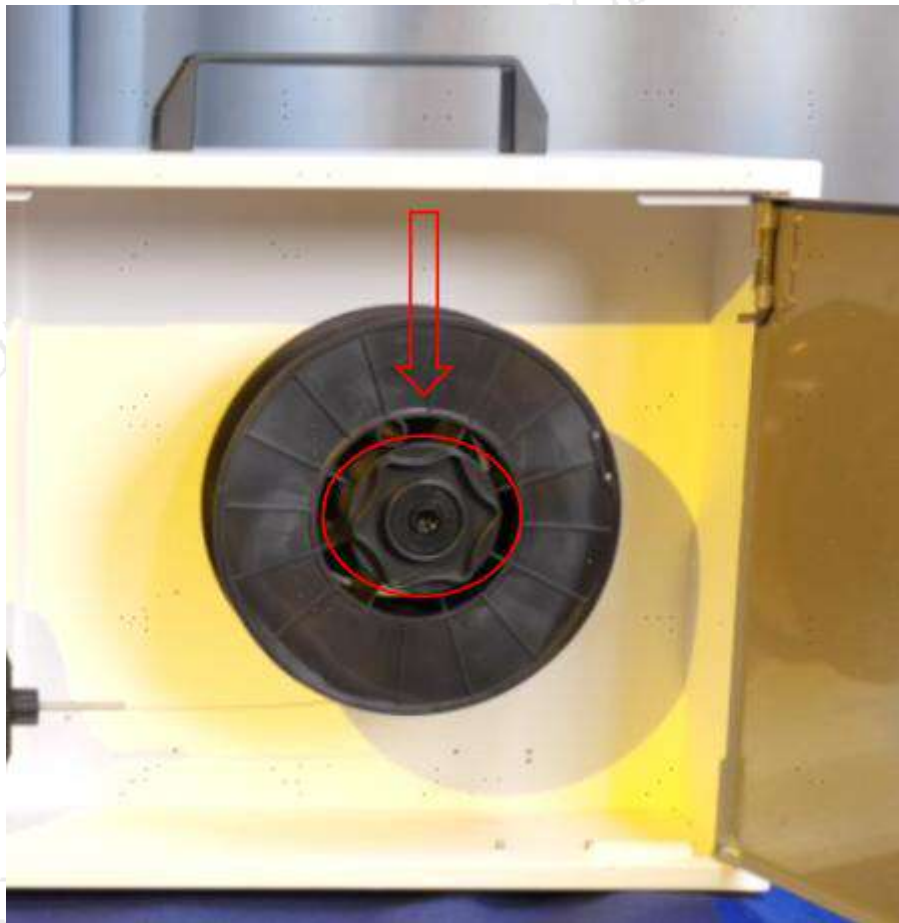

3. Installation of wire feeding wheel

3.1 There are two wire feeding wheels in total, two sides are different models, corresponding to different core diameters, please be sure to install corresponding. If $\phi 1.2$ welding wire is installed, the side of the wire feed wheel marked V 1.2 is on the outside.



3.2 When installing, be sure to stick the welding wire in the card slot and then clamp it.



4. Installation of wire feeding tube

4.1. Put the welding wire into the wire feed tube, insert it into the appropriate position (too short may cause the phenomenon of wire sticking) and tighten the screw;

4.2. When installing the wire feed pipe, remove the copper tip of the end first and match the corresponding copper tip;

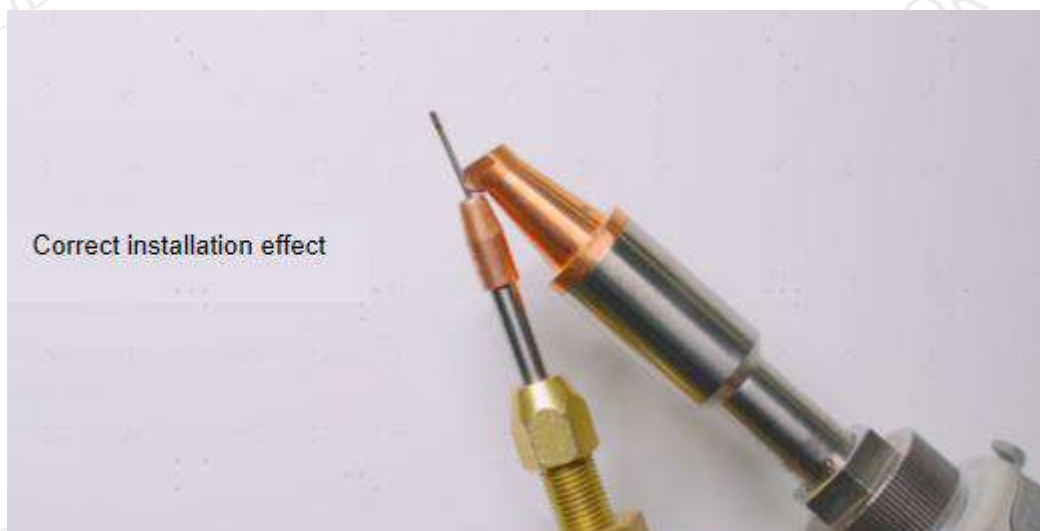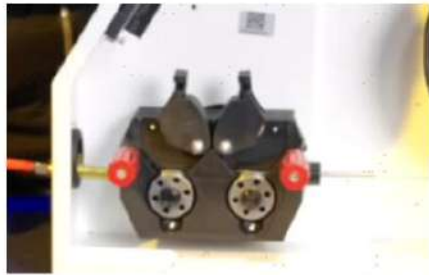

5. Operate the panel

5.1. The value of the home page shows the wire feed speed, which is adjusted by the up and down keys. Please keep the running state when using;

5.2. Manual wire feeding: After holding down, the wire feeder starts to feed, and the manual wire feeding speed depends on the background setting;

5.3. Manual pumping: After holding down, the wire feeder begins to pump back, and the manual pumping speed depends on the background setting.



5.4. After all Settings are completed, click to save;

5.5. Set the wire feed speed of the page as the default wire feed speed, that is, after changing here, the switch still remains unchanged;

5.6. Startup delay: not set by default;

5.7. Withdrawal length and filling length: set according to actual use;

When the wire feed is stopped, the system will first pump back a certain distance and then a certain distance in the wire feed, this function is mainly used for breaking the wire;

When the wire is still outside at the beginning of each welding, please set the withdrawal length to be greater than the length of the wire.



6- Startup procedure

WARNING:

© Make sure all electrical connections are connected before use. If conditions permit, all connectors must be tightened and secured with screws.

© When operating the laser, do not directly look at the output fiber, and wear safety glasses. When connecting cables, turn off all power switches of the laser.

© Equipment must be grounded when in use.


1. The procedure for activating the device is as follows:

(1) Power on, the screen displays bodor LOGO, short press to turn into orange



LOGO

(2) Rotate the knob screen, the LOGO moves slowly, the LOGO rotates 90°, and the

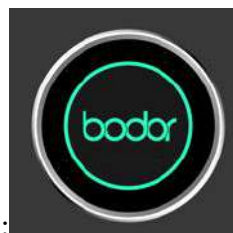

color turns green;

(3) Short press the knob screen, the device displays the activation time, short press to return to the main interface;

- (4) If the device is powered off, power it on again, and the device is activated
2. The startup process is as follows:
- (1) Connect the power input to the indicated voltage, phase, and frequency;
 - (2) The connection is securely locked to the loop interface, the wire feed power cord is connected, and the signal line of the wire FEEDER is connected to the FEEDER;
 - (3) Connect the protection GAS pipe (6mm) to the GAS IN interface, and open the gas valve;
 - (4) Turn the key (to put it in the "ON" position) and press the reset button once;
 - (5) Press the knob screen, enter the software interface, adjust the corresponding parameters (laser power, swing amplitude, swing frequency, blowing off gas delay, power slow up slow down, light mode and other parameters);
 - (6) The crocodile clip is clamped on the workpiece that needs to be welded;
 - (7) Open the laser start button and laser enable switch;
 - (8) Hold the headin hand, then press and hold the headswitch.
- ◎ Please check whether the red light is in the center position after each turn on.

7- Protective mirror replacement

1. Before operation, please clean and dry your hands first, and then wipe your hands again with cotton dipped in alcohol.
2. Open the mirror compartment cover in a clean and dust-free place, clean the dust around the cover, remove the lens bracket, take out protective measures (covered with masking paper), check the protective lenses, and if there are obvious burn spots on the surface of the lenses, they should be replaced directly;



3. Then check the flooding seal below the lens. If there are any scratches or deformations on the plug seal, it cannot be used and must be replaced immediately;

4. When replacing the lens, please first remove the pan plug seal, slowly pour out the burned protective mirror, then use alcohol cotton to carefully wipe the protective mirror bracket and pan plug seal, and use clean compressed air to dry, and finally put the new protective mirror slowly into the trough of the protective mirror bracket to install the pan plug seal.

5. Wipe the mouth of the compartment and the inside of the compartment cover with a cotton ball dampened with alcohol, insert the pan seal side of the protective mirror bracket towards the muzzle, and close the compartment cover.

© Replacement of protective and focusing lenses must be carried out in a clean and enclosed space.

8- Welding process parameter

board	thickness (mm)	power	Wire feed speed (cm/min)	Air flow (L/Min)	Scan frequency (HZ)	Sweep width (mm)	Wire diameter (mm)	Welding wire material
CS	1	30%	70	15	60	3	1.0	CS
	2	55%	60	15	60	3	1.0	CS
	3	75%	55	15	60	3	1.0	CS
	4	100%	45	15	40	3	1.0	CS
SS	1	40%	80	15	60	3	1.0	SS
	2	70%	60	15	60	3	1.0	SS
	3	100%	60	15	60	3	1.0	SS
	4	100%	40	15	60	3	1.0	SS
AL	1	40%	70	15	60	3	1.0	AL
	2	67%	65	15	60	3	1.0	AL
	3	85%	60	15	50	3	1.0	AL
	3.5	100%	55	15	50	3	1.0	AL
CU	1	50%	65	15	60	3.0	1.0	CU
	1.5	75%	55	15	60	3.0	1.0	CU
Remarks	<p>1, the ratio of welding head 60:150, 1200W laser fiber core diameter is 20 μm;</p> <p>2, high carbon steel welding is not recommended to use nitrogen protection;</p> <p>3, power percentage (1200w) 10-100%, swing range 0-5000μm (recommended 2000-3000 μm), swing frequency 0-200hz (recommended manual welding frequency 40-70hz, gas flow rate is not less than 15l/min), other parameters unchanged, swing range or wire feed speed increase, The laser power also needs to be increased accordingly;</p> <p>4, the wire feeder needs to adjust the wire feed speed, by adjusting the pressure of the</p>							

wire feed wheel, in the automatic mode, the wire feed speed is uniform, the wire feed is smooth, and there is no stuck phenomenon;

5, due to the different equipment configuration (wire feeding machine differences) and welding methods (wire feeding speed, air pressure, degree of deflection, welding Angle) used by different customers, this data is for reference only;

6, Graphite wire feeding tube is recommended for aluminum welding

9- Fault list







The alarm points for the laser are as follows:

Serial Number	Alarm Code	Fault Name	Fault causes and handling methods
1	1	Humidity alarm	Excessive humidity inside the welding machine; Check if the environmental humidity is too high
2	2	Forward alarm to PD	Low laser power and other operations that may cause low output power of the laser; Check the parameter settings. If the alarm is not resolved, please contact customer service for confirmation
3	3	Spatial PD alarm	Abnormal optical path; Please contact customer service for confirmation
4	4	Over current alarm	Welding electromechanical flow is large; Please contact customer service for confirmation
5	5	Scram alarm	The emergency stop button has been pressed; Check if the emergency stop button is reset
6	6	Air pressure alarm	The welding pressure must be greater than 0.3 bar, otherwise a pressure alarm will be triggered; Check the air source and pressure value
7	7	Temperature alarm	The internal overheating of the welding machine is too high; Check if the filter is blocked, check if the refrigeration system is functioning properly, and if there is any leakage of refrigerant
8	8	Torch head temperature alarm	Protective and reflective mirrors may have dirt or burn points; If it is dirty or burnt, it needs to be replaced in a timely manner; If the optical lenses are still experiencing high temperatures despite normal operation, please contact customer service for confirmation (Note * Please do not disassemble the welding head without authorization, as this behavior may cause internal contamination and high temperature inside the welding head)

WARNING:

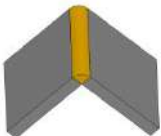© All laser alarm information will have a corresponding display reminder on the monitoring software; Please pay attention! If you have any questions, please contact our customer service.

10-Nozzle usage instructions

Splicing welding	External corner welding	Misaligned corner welding	Internal angle welding	Cutting
				
				
AS-12	AS-12		AS-12	1.5
				
BS-16	BS-16		BS-16	
				

AS-20D	AS-20D		AS-20D	
				
	CS-12	CS-12		
				
	ES-12	ES-12		
				
	FS-16	FS-16		
				
	C			

©For specific usage instructions, please refer to the official website video.

Chapter 7 Maintenance and upkeep





Equipment maintenance must be stopped first, turn the switch to the "off" position and lock it with a lock. Place a stop maintenance sign and wait for 5 minutes before starting work, otherwise there is a risk of electric shock.

Weekly inspection is the main content of daily maintenance of welding machine. Daily maintenance should analyze the running status, vibration, noise, and operating data of the equipment to find out whether there are security risks in advance. It mainly includes the following contents:

Check the filter and clean the dust and foreign matter on it. The specific steps are as follows:

1. Disassemble the six screws on the air inlet plate;
2. Pull the air filter upward and remove it for cleaning;
3. Check whether the condenser has dust and foreign matter, and use compressed air for simple cleaning;
4. Insert the clean air filter into the air intake plate and secure the six screws.

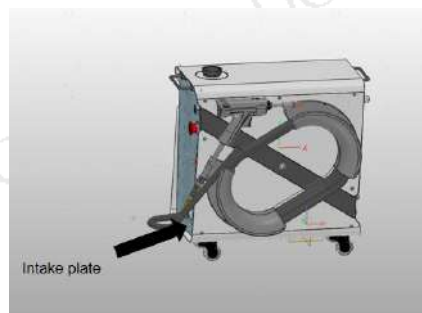

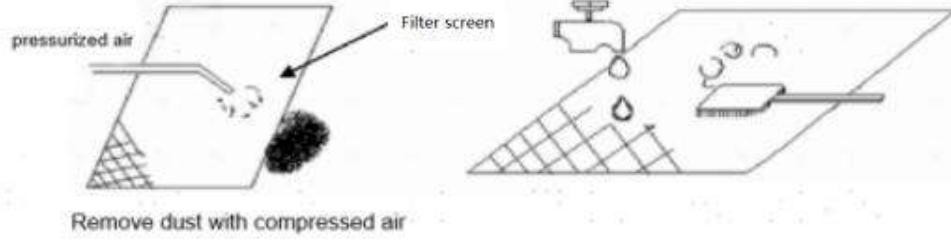

Chapter 8 Transportation and Storage

1- Transport requirement

Do not move the device up and down or tilt it excessively. Pay attention to the anti-tipping label to avoid bumps and collisions.

2-Storage requirement

1. Please place the machine away from dust;
2. Please wipe the surface of the body clean, use the air pump to blow the dust inside, wipe away the oil;
3. Cover the outside of the device with a protective cover to prevent dust and water attachment;
4. Store the machine on flat ground, dry and ventilated place, avoid direct sunlight;
5. If the equipment is equipped with casters, please ensure that the casters are fixed or locked to avoid injury caused by sliding casters;

Chapter 9 Company Information

Jinan Bodor CNC Machine Co.,Ltd.

No.3999 Chunhui Road, Licheng District, Jinan City, Shandong Province,

China



Change Human Life with Laser Technology

Jinan Shandong China

Tel: +86-531-88690051

Company website: www.bodor.com

Jinan Bodor CNC Machine Co., Ltd.

